

- Dry Erase markers can be wiped off using a standard eraser, microfiber eraser cloth or any dry cloth.
- To clean the surface, use a damp cloth or sponge and a mild soap or detergent. Rinse thoroughly with warm water and wipe dry. Acidic or abrasive cleaners can damage laminate surfaces; do not use them.
- Difficult stains can be removed using a mild household cleaner and baking soda; mixing to achieve a paste consistency. Use a stiff nylon bristle brush, scrubbing (approx.. 15-20 strokes) the affected area. Do not scrub so as to mar (damage, scratch) the surface finish.
- Always rinse laminate surfaces after cleaning. Failure to rinse after cleaning can cause damage, such as permanently etched scars or stains; even if a small amount of cleaning solution remains on the surface.

Recommended Accessories:



Dry Erase Cloth

Product Code: ECM227E - each
ECM227D - 1 dozen

- 12"x12 " Microfiber eraser cloth with a small magnet
- Erases cleanly with no smearing
- Reduces marker residue build-up