

Cleaning Instructions

Dust: Use a vacuum cleaner with a soft brush attachment or a duster to remove dust and dirt.

Spot clean: For minor stains, use a damp cloth to gently wipe the area.

Use a mild cleaning solution: Mix a mild soap or specialized panel cleaner with water. Apply the solution to a cloth and gently wipe the panels.

Rinse: Use a clean, damp cloth to remove any soap residue.

Dry: Dry the panels thoroughly to prevent streaks.

Additional tips for cleaning acoustic panels:

- Avoid using abrasive materials, scouring powders, steel wool, or cleaners that contain ketones, kerosene, or petroleum products.
- Test the cleaning solution on a small, inconspicuous area first to ensure it doesn't affect the color or texture of the panel.
- Clean from bottom of wall upward.
- Rinse thoroughly with clean water from the top down using a sponge.
- For deeply embossed wall coverings, pay extra attention to prevent suds or loosened dirt from lodging in depressed surfaces.
- Suggest dusting panels regularly and deep-cleaning every three to four months.