



## Trak-It Installation Instructions

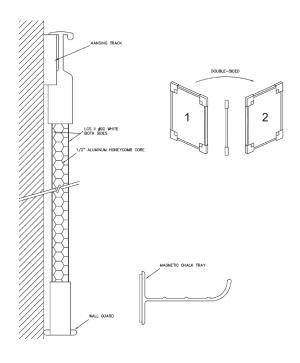

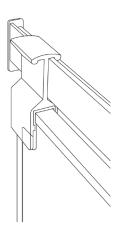

- 1. Determine position on wall. Using a level, measure up required distance from the floor, and strike a line.
- 2. Based on position, pre-drill necessary holes on the track; if needed, cut aluminum track and plastic cover to length.
- 3. Position track so that the bottom edge is on the line.
- 4. Secure track to the wall with suitable anchors and proper fasteners, recommended for the type of wall.
  - NOTE: If track is to be installed end to end, proceed to end to end installation instructions below.
- 5. Install plastic end caps in each end and fasten with Phillips head screw before snapping plastic cover into place.
- 6. Position plastic cover onto track and snap into position.

## For End To End Track Installation:

Install ends caps on outside ends of track.
NOTE: For optimum performance, stagger aluminum track seams and plastic cover plate seams.

When installing the plastic cover, overlap the track seam with the cover. (For example: Two 6' sections of track are installed on the wall. Using one 6' piece and two 3' pieces, install a 3' section first, then the 6' section. Finishing with the 3' section.