




Profile Series Markerboard



INSTALLATION INSTRUCTIONS

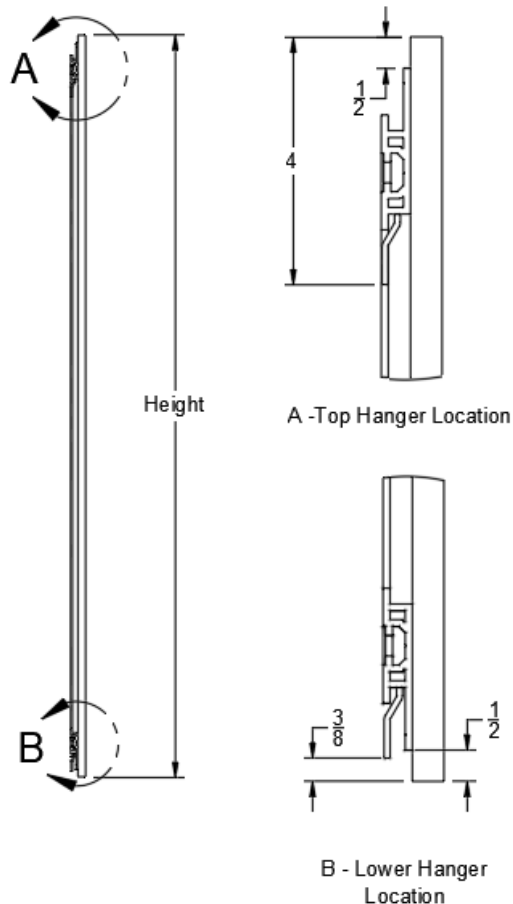

WARNING
Risk of injury to installers and users
Read the entire assembly directions before
beginning assembly.

Profile Series

1. Determine the desired top height for mounting the markerboard panels. Mark a line.
2. Measure down 4" from the top line and draw a level line for the top hanger.
3. Measure down from the top line the height of the panel. Make a small line. From there, measure up $\frac{3}{8}$ ". Mark a line for the position of the lower hanger.
4. Attach hanger using appropriate wall fasteners. Ensure hanger is mounted centered of board width.
5. Using a straight edge, shim where necessary so that all anchor points of hanger(s) are in line and level.
6. If multiple panels are to be installed in a "run", repeat steps above for hanging each additional panel.

NOTE: For over sized boards, a center hanger maybe attached to the panel. To determine mounting location of center hanger. Before hanging the board, position the hanger manually within the center board hanger. Measure down from the top of board to bottom of the hanger. Transfer measurement to the wall. Repeat step 4.