




Profile Series Markerboard



INSTALLATION INSTRUCTIONS

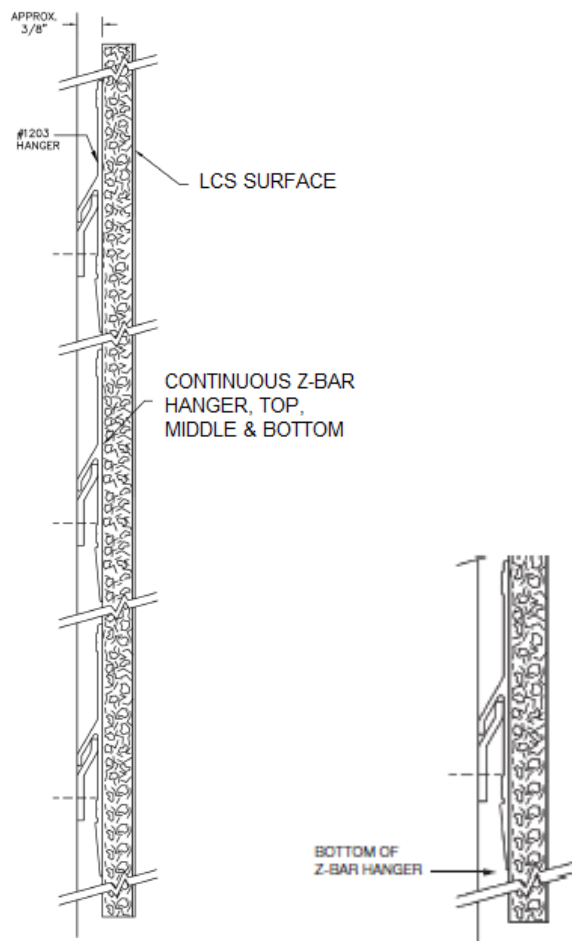

Profile Series

1. Determine the desired top height for mounting the markerboard panels.
2. Measure down to the very bottom of each Z-bar hanger on the panel, striking a level line for all three positions. See illustration.
3. Measure up $\frac{3}{4}$ " from those lines and place the bottom of the Z-clip hangers to be mounted on the wall. (Wall anchors by others.)
4. Using a straight edge, shim where necessary so that all anchor points of hanger(s) are in line and level.
5. If multiple panels are to be installed in a "run", repeat steps above for hanging each additional panel.



800-434-4610
calyxbyclaridge.com

WARNING

Risk of injury to installers and users
Read the entire assembly directions before
beginning assembly.