


## **Trak-It**Panels

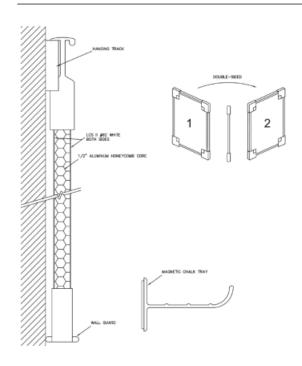

## **INSTALLATION INSTRUCTIONS**



## WARNING

Risk of injury to installers and users Read the entire assembly directions before beginning assembly.

- Determine position on wall. Using a level, measure up required distance from the floor, and strike a line. 2. Based on position, pre-drill necessary holes on the track; if needed, cut aluminum track and plastic cover to length.
- 2. Position track so that the bottom edge is on the line.
- 3. Secure track to the wall with suitable anchors and proper fasteners, recommended for the type of wall. NOTE: If track is to be installed end to end, proceed to end to end installation instructions below.
- 4. Install plastic end caps in each end and fasten with Phillips head screw before snapping plastic cover into place.
- 5. Position plastic cover onto track and snap into position.

## For End to End, Track Installation:

Install ends caps on outside ends of track.

NOTE: For optimum performance, stagger aluminum track seams and plastic cover plate seams.

When installing the plastic cover, overlap the track seam with the cover. (For example: Two 6' sections of track are installed on the wall. Using one 6' piece and two 3' pieces, install a 3' section first, then the 6' section. Finishing with the 3' section.)

