


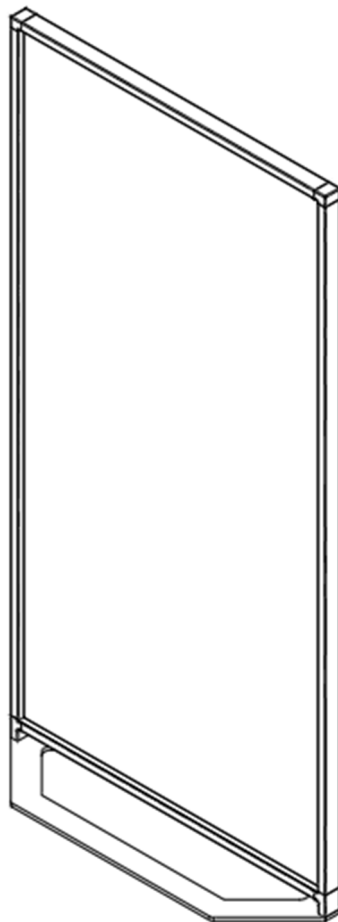

Venue Space Divider

Vertical Panel System

ASSEMBLY INSTRUCTIONS



Hardware

6m-1.0-12mm" Screw (x4)
1/4-20 x 3" Screw (x2)


Tools Required

5/32" Allen Wrench
5mm Allen Wrench

WARNING

Risk of injury to installers and users
Read the entire assembly directions before
beginning assembly.

Base Assembly

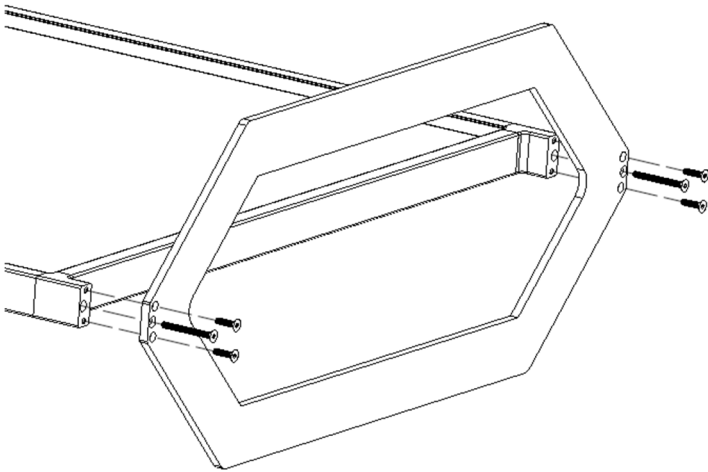

1. Lay divider down on a flat raised surface. (table)
2. Align steel base as shown with the countersink holes side facing down.
3. Attach the 3" screws to the center hole location on each side. Snug tight. (1 per side.)
4. Then install the 12mm screws to both sides, (2 per side)
5. Tighten all screws using appropriate Allen Wrenches.
6. Stand divider up.

