


# RAVINA Aluminum Frame Wallboard

LCS\Glass Whiteboards  
Tackboard\Acoustic



## ASSEMBLY INSTRUCTIONS

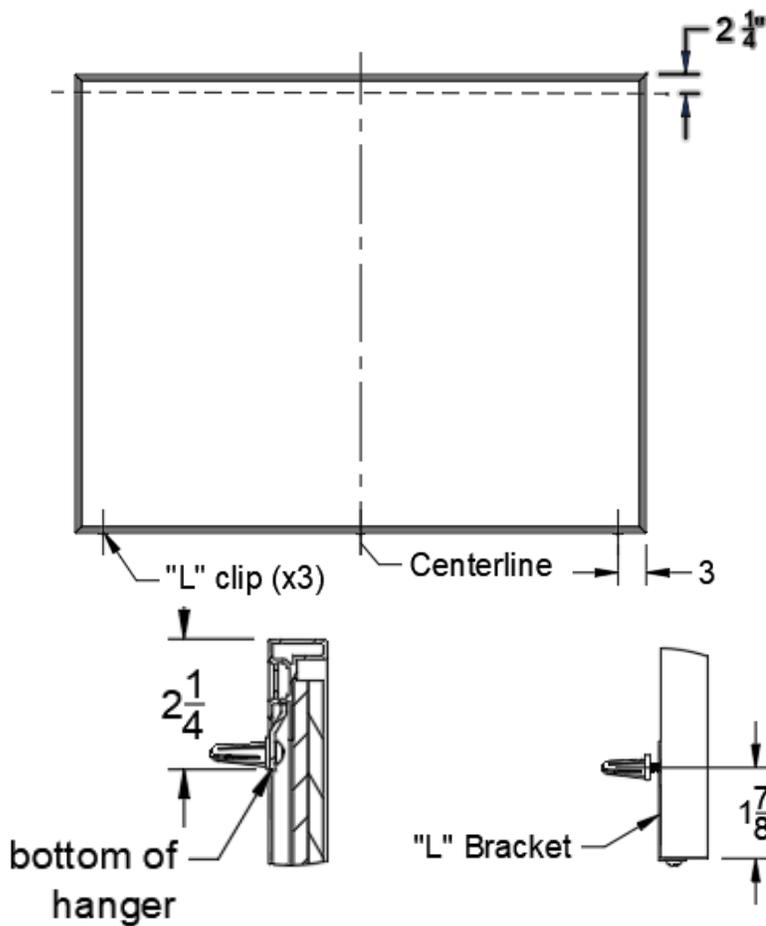

## RAVINA Aluminum Wallboard

1. Determine the desired top height of the board on your wall. Mark a line.
2. Measure down 2 1/4" from the line and draw a level line.
3. Place bottom edge of "Z" Bar hanger on level line, and center right to left. (See image.)
4. Using a straight edge, shim where necessary so that all anchor points of hanger are in line and level.
5. From the top mark line (step #1), measure down the height of the board and mark a line (Bottom of board). Then measure up 1 7/8" and mark a line for the "L" clips fasten points. Install "L" clips approximately 3" from sides of board, using the appropriate wall fastener.
6. Hang board, secure board to "L" clips with self tapping screws provided. (3)

### WARNING

Risk of injury to installers and users  
Read the entire assembly directions before beginning assembly.