


# RAVINA Wood Frame Wallboard


LCS\Glass Whiteboards  
Tackboard\Acoustic



## ASSEMBLY INSTRUCTIONS

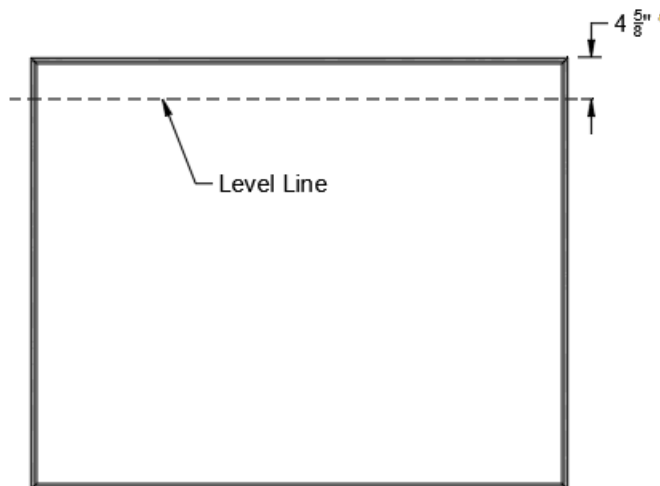

1. Determine the desired top height for mounting the wallboard. Mark a line.
2. Measure down 4 5/8" from the top line and draw a level line for the hanger placement.
3. Attach hanger using appropriate wall fasteners. Ensure hanger is mounted **centered** of board width.
4. Using a straight edge, shim where necessary so that all anchor points of hangers are in line and level.
5. Hang board onto "Z" bar hanger. Ensure top hanger engage with support trim as shown. (Requires 2 people)
6. To secure bottom of wallboard to wall, remove the release liner from the adhesive Tabs along the bottom.

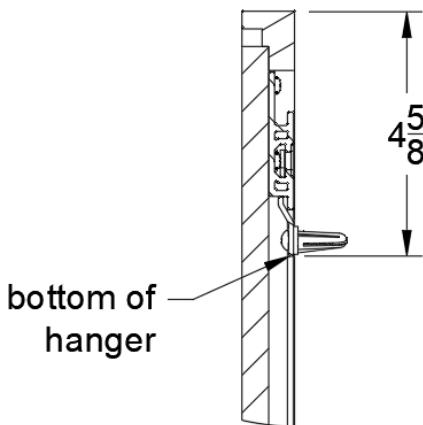

Note: Frame dimensions may vary, for a precise measurement. First place hanger below support frame as shown. Measure down from top of board to bottom of hanger.

**WARNING**  
Risk of injury to installers and users  
Read the entire assembly directions before beginning assembly.

