




FlipWrite Graphic Markerboard

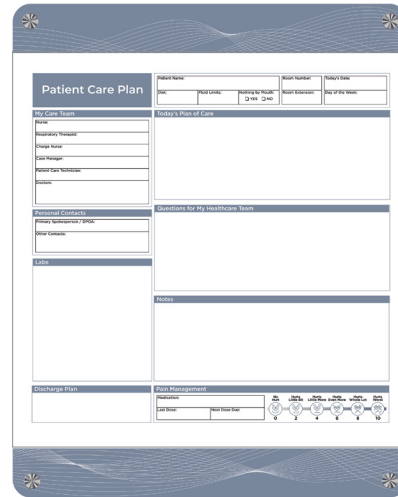

INSTALLATION INSTRUCTIONS

Installation Instructions

1. Take the glass board out of carton or crate.
2. Use glass board as a template and place against the wall ensuring that its plumb and level mark center of holes in the glass on to the wall for the standoffs.
3. Use proper anchors for the type of wall that you're mounting to and screw the base of the standoff to the wall.
4. Put the glass marker board over the standoff bases and screw on the cap screw.
5. Ensure to tightening the set screw on the cap screw.
6. Put the insert panel in the slot in the brackets on the back of the glass.



800-434-4610
calyxbyclaridge.com

WARNING

Risk of injury to installers and users

Read the entire assembly directions before beginning assembly.